


Federal and California version model year 1977/78/79

Removal

- 1 Pull blue/purple vacuum line from anti-backfire valve.
- 2 Set hose clamps (arrows) back for approx. 2 cm.
- 3 Pull-of lower contour hose leading to air injection line for cylinder head.
- 4 Loosen both fastening screws (1) and unscrew.
- 5 Push anti-backfire valve in upward direction and remove from connecting hose of air injection line in rearward direction.

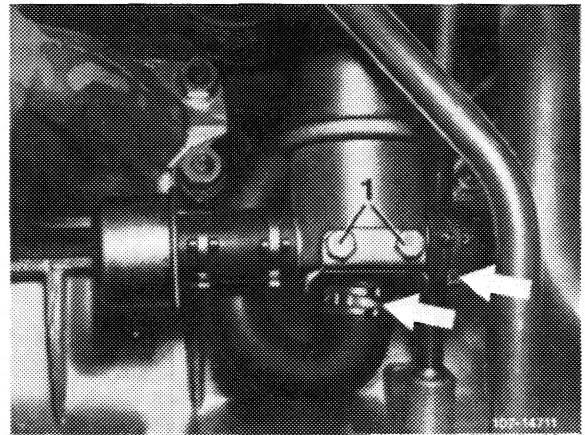

Installation

- 6 For installation proceed vice versa.